

DMX CHANNELS

MODE	MODE	MODE	FUNCTION	DMX Value
15 Ch	18 Ch	23 Ch		
1	1	1	PAN 0~100%	000 - 255
2	2	2	PAN FINE 0~100%	000 - 255
3	3	3	TILT 0~100%	000 - 255
4	4	4	TILT FINE 0~100%	000 - 255
5	5	5	PAN/TILT SPEED Fast to slow	000 - 255
6	6	6	SPECIAL FUNCTION No function Reset all (Hold 3 Seconds) No function	000 - 199 200 - 209 210 - 255
7	7	7	RED 0~100%	000 - 255
8	8	8	GREEN 0~100%	000 - 255
9	9	9	BLUE 0~100%	000 - 255
10	10	10	WHITE 0~100%	000 - 255
	11	11	COLOR No function Red Yellow Green Cyan Blue Magenta White Full Clockwise rotation (Fast to Slow) Stop Run Counterclockwise rotation (Slow to Fast)	000 - 007 008 - 022 023 - 037 038 - 052 053 - 067 068 - 082 083 - 097 098 - 112 113 - 127 128 - 189 190 - 193 194 - 255
11	12	12	GOBO Open Gobo 1 Gobo 2 Gobo 3 Gobo 4	000 - 007 008 - 015 016 - 023 024 - 031 032 - 039

MODE	MODE	MODE	FUNCTION	DMX
15 Ch	18 Ch	23 Ch		Value
	12	12	Gobo 5 Gobo 6 Gobo 7 Gobo 1 Shaking Gobo 2 Shaking Gobo 3 Shaking Gobo 4 Shaking Gobo 5 Shaking Gobo 6 Shaking Gobo 7 Shaking Clockwise rotation (Fast to Slow) Stop Rotation Counterclockwise rotation (Slow to Fast)	040 - 047 048 - 055 056 - 063 064 - 073 074 - 082 083 - 091 092 - 100 101 - 109 110 - 118 119 - 127 128 - 189 190 - 193 194 - 255
12	13	13	GOBO ROTATION Stop Rotation Clockwise rotation (Fast to Slow) Stop Rotation Counterclockwise rotation (Slow to Fast)	000 - 127 128 - 129 190 - 193 194 - 255
13	14	14	PRISM Prism Off Prism On Clockwise rotation (Fast to Slow) Stop Rotation Counterclockwise rotation (Slow to Fast)	000 - 010 011 - 127 128 - 189 190 - 193 194 - 255
14	15	15	STROBE Shutter Closed No Function (Shutter open) Strobe Effect (Slow to Fast) No function (Shutter open) Pulse-effect in sequence No function (Shutter open) Random Strobe Effect (Slow to Fast) No Function (Shutter open)	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
15	16	16	FOCUS 0~100%	000 - 255
	17	17	DIMMER 0~100%	000 - 255
		18	COLOR MACRO No Function R:100% / G:0~100% / B:0 / W:0 R:100%~0 / G:100% / B:0 / W:0 R:0 / G:100% / B:0~100% / W:0 R:0 / G:100%~0 / B:100% / W:0	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090

MODE	MODE	MODE	FUNCTION	DMX
15 Ch	18 Ch	23 Ch		Value
		18	R:0~100% / G:0 / B:100% / W:0 R:100% / G:0 / B:100%~0 / W:0 R:100% / G:0~100% / B:0~100% / W:0 R:100%~0 / G:100%~0 / B:100% / W:0 R:100% / G:100% / B:100% / W:100% Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Color 8 Color 9 Color 10 Color 11	091 - 110 111 - 130 131 - 150 151 - 170 171 - 200 201 - 205 206 - 210 211 - 215 216 - 220 221 - 225 226 - 230 231 - 235 236 - 240 241 - 245 246 - 250 251 - 255
		19	AUTO PROGRAM No Function 4 Colours Snap 4 Colours Fade 15 Colours Snap 15 Colours Fade Sound Control	000 - 010 011 - 070 071 - 130 131 - 190 191 - 250 251 - 255
		20	AUTO PROGRAM SPEED Speed (Slow to Fast) SOUND SENSITIVITY Sound Sensitivity OFF Control the Sound Sensitivity	000 - 010 000 - 010 011 - 255
		21	MOTOR SHOW No Function Motor Show 1 Motor Show 2 Motor Show 3 Motor Show 4 Motor Show 5 (Motor Show 1 - 4) Motor Show 6	000 - 010 011 - 058 059 - 106 107 - 154 155 - 202 203 - 250 251 - 255
		22	MOTOR SHOW SPEED Speed (Slow to Fast)	000 - 255
	18	23	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 Dimmer speed mode 2 Dimmer speed mode 3	000 - 051 052 - 101 102 - 152 153 - 203 204 - 255