

Quick Start Guide

Chroma-Q® Inspire™ Ceiling Mount



Chroma-Q®
BRILLIANT SOLUTIONS

For a full product manual please visit www.chroma-q.com

Part Number: CQ632-9060, CQ632-9061

Model: 632-9060, 632-9061

For use with


Part Number: CHINHL[xxxx]

Model: 632-XXXX


Installation Disclaimer:

1. Installation should be carried out by an experienced professional. The instructions below are provided for information only.
2. All work should be verified to meet Local and National Building Regulations, and Health and Safety Standards in particular.
3. Ensure that the specified torque is applied to fasten the Slide Brackets and Angle Supports.
4. The Angle Supports of the Inspire™ fixture must be fastened to the ceiling with the appropriate load capacity.
5. The use of a safety rated chain or other arrest cable is mandatory as per standard rigging practice.
6. While the supplied rails can support the weight of the fixture, it is highly important to have the fixture secured with a safety cable.

1. Kit Contents
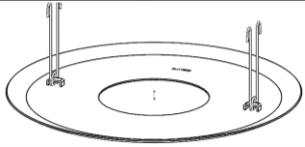
#	Items	P/N	Qty.	Figure
1	Trim Ring	632-9005 / 632-9006	1	
2	Support Angle	632-0091	2	
3	Side Plate	632-0092	2	
4	Slide Bracket	632-0093	2	
5	Screw M5 12mm	450-1212-0	8	
6	Screw Self Tap M3.5	450-6213-0	4	
7	Ceiling Mount QSG	632-0722	1	

For the ease of assembly Items 2, 3, 4 and 5 are pre-assembled
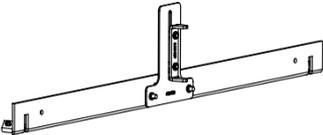
#	Items	Qty.	Figure
A	Sub-assembly (Support Angle, Side Plate and Slide Bracket)	2	

2. Tools Required


Screwdriver with PH#1 (Minimum torque: 5.5 in-lb.)

3. Installation Guide


Hole Sizing Reference (inches/cm)

Note:


- Ceiling hole size: 8.7" / 22 cm
- Trim Ring outer diameter: 12" / 28 cm
- Trim Ring inner diameter: 4.1" / 10.5 cm

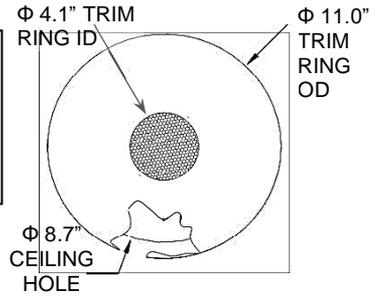


1. Remove the face plate of the Inspire™ fixture by taking out 2 x M3 flat head screws.

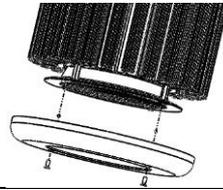


2. Slide the Sub-assemblies [A] so that the Slide Brackets [4] are inside the extrusions and the rest of the Sub-assembly are outside. Ensure that the Sub-assemblies [A] are on the opposite side of each other.

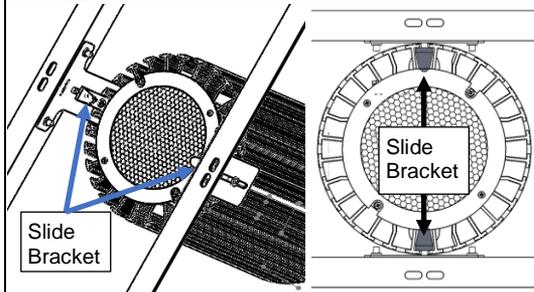


3. Re-attach the Face Plate of the fixture by tightening the 2 M3 Screws back in their place.

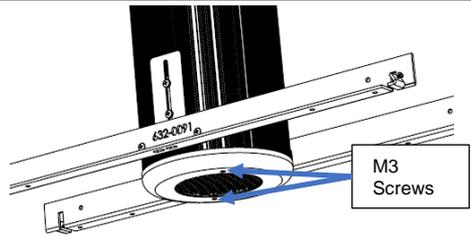


4. Slide the Sub-assembly [A] to the desired height (Gap between the Angle Support and Face Plate = Ceiling Thickness + 6.15mm). Tighten the 2 M5 screws on each Sub-assembly [A] to make a solid connection.

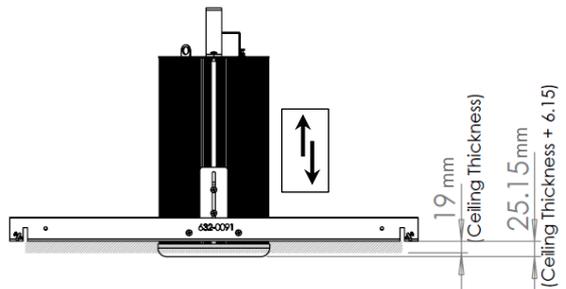


5. Place the assembled kit and fixture on the ceiling. Ensure the fixture and the ceiling hole are co-centric. Clamp the angle bracket to the ceiling (clamping hardware is not supplied).

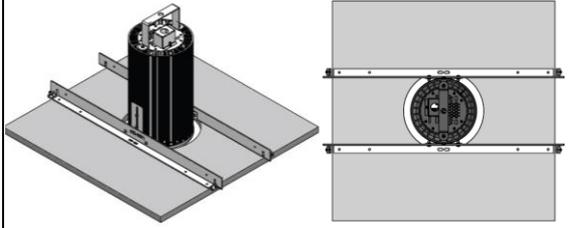


6. If the ceiling has rails, ensure the rails are inside the Angle Support's [2] grooves. Tighten the two M3.5 Screws [6]. There are three holes near both the ends of Angle Support [2], to attach extra supports, if needed.

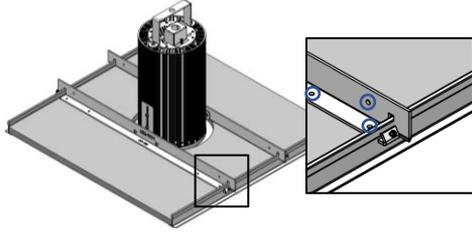


7. Connect the power and data wiring to the fixture, secure the safety cable (safety cable is not provided).

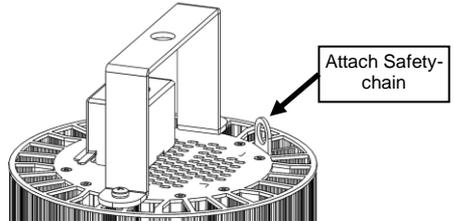

8. Pinch the springs on the Trim Ring [1] and insert them into the slots in Angle Support [2].

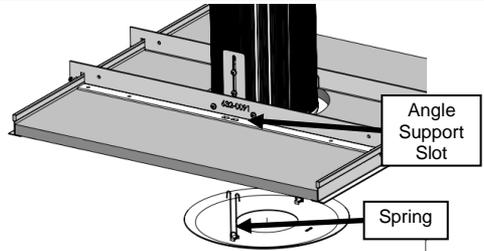

9. Push the Trim Ring [1] firmly into place for tight fit. Adjust the Trim Ring [1] to the centre of the lens.

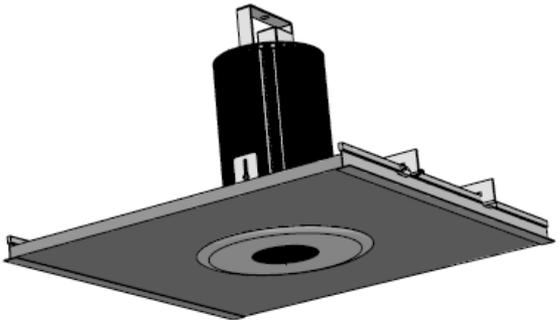

Approvals & Disclaimer



The information contained herein is offered in good faith and is believed to be accurate. However, because conditions and methods of use of our products are beyond our control, this information should not be used in substitution for customer's tests to ensure that Chroma-Q® products are safe, effective, and fully satisfactory for the intended end use. Suggestions of use shall not be taken as inducements to infringe any patent. Chroma-Q® sole warranty is that the product will meet the Chroma-Q® sales specifications in effect at the time of shipment. Your exclusive remedy for breach of such warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted.

Chroma-Q® reserves the right to change or make alteration to devices and their functionality without notice due to on-going research and development.

The Chroma-Q® Inspire™ has been designed specifically for the lighting industry. Regular maintenance should be performed to ensure that the products perform well in the entertainment environment.

If you experience any difficulties with any Chroma-Q® products please contact your selling dealer. If your selling dealer is unable to help, please contact support@chroma-q.com. If the selling dealer is unable to satisfy your servicing needs, please contact the following for full factory service:

Outside North America:
Tel: +44 (0)1494 446000
Fax: +44 (0)1494 461024
support@chroma-q.com

North America:
Tel: +1 416-255-9494
Fax: +1 416-255-3514
support@chroma-q.com

For further information please visit the Chroma-Q® website at www.chroma-q.com.

Chroma-Q® is a trademark, for more information on this visit www.chroma-q.com/trademarks.

The rights and ownership of all trademarks are recognized

